



INSTALLATION

STEP 1

Ensure the BFM™ Spigot is clean and dry.



STEP 2

Seat the back of the connector into the BFM™ Spigot and hold, keeping fingers clear of the seal.

CAUTION!

IT IS IMPORTANT ON THE TOOL RELEASE FITTING TO KEEP YOUR FINGERS CLEAR OF THE SEAL AS IT SNAPS INTO PLACE WITH FORCE.



STEP 3

COMPLETE.

The BFM Fitting™ is ready for use.

REMOVAL

STEP 1



Insert the removal tool in the opening of the hole and push towards the centre of the fitting.

STEP 2



Hold the seal of the connector and remove from the spigot.



BFM fitting recommends proximity sensors as an alternative to tool release. More info can be found at www.pepperl-fuchs.com or by contacting sales@bfmfitting.com.

BFM Global makes no warranty of any kind, expressed or implied, except that goods sold shall be of merchantable quality, free of manufacturing defect, and the buyer assumes all risk and liability resulting from the use of the goods, whether used singly or in combination with other products.

Web site: www.BFMfitting.com

 **BFM™**
fitting
"Keeping You Connected"

BFM™ Fitting
Tool Release Installation & Removal Instructions